



HHMPI CABLES, ACCESSORIES, & SOFTWARE

Flight Recorder P/N	HHMPI & Cable P/N	Description
N/A	FDS40-0301	Hand Held Multi-Purpose Interface (HHMPI) Kit *Includes HHMPI Cradle
N/A	FDS40-5102	HHMPI Engineering Unit conversion software
N/A	FDS40-0331	HHMPI PCMCIA Assembly
N/A	FDS40-0332	Wireless Capability Option
N/A	FDS40-0373	HHMPI Docking Cradle
SENTRY FDS84-1001 FDR FDS84-3001 CVFDR FDS84-3101 CVFDR RIPS FDS84-2001 CVR FDS84-2101 CVR RIPS	FDS40-0283	SENTRY Interface Cable (FDR & CVR Download Cable)
	FDS40-0068	SENTRY Bench Power Cable
	FDS40-0069	SENTRY Interface Cable (Bias/Aircraft Cable On Wing) – (Optional)
	FDS40-5053	SENTRY FDR Download Software (HHMPI FDR Data Download Software)
	FDS40-5054	SENTRY CVR Download Software (HHMPI CVR Data Download Software)
Honeywell UFDR 980-4100-XXX	FDS40-0204	Honeywell DFDR (Sunstrand DFDR) UFDR, Interface Cable
	FDS40-0275	Honeywell DFDR (Sundstrand DFDR) UFDR, Interface Cable
	FDS40-5025	Honeywell AR FDR Interface Cable (45-foot length)
Honeywell SSFDR 980-4710-00X	FDS40-0208	Honeywell AR Series FDR Interface Cable
	FDS40-5022	Honeywell AR SSFDR Download Software
Honeywell SSFDR 980-4120-XXX 980-4700-XXX	FDS40-0203	Honeywell SSFDR Interface Cable
	FDS40-5022	Honeywell SSFDR Download Software
Honeywell (SRVIVR) 980-4131-XXX LW FDR 980-6050-XXX LW CVR 980-6044-XXX (LW CVDR)	FDS40-0210	Honeywell Light Weight (AR HFR5) Interface cable. Requires on-aircraft CVR download cable (FDS40-0259) for insitu downloads
	FDS40-0259	Honeywell LW/SRVIVR Power Cable (On-Aircraft)
	FDS40-0221	Extra Long 45ft Cable
	FDS40-5016	Honeywell SRVIVR Download Software
Honeywell HFR5-D 980-4750-XXX	FDS40-0232	Honeywell HFR5-D Interface Cable
	FDS40-5024	Honeywell HFR5-D Download Software
Honeywell HFR5-V CVR 980-6032-001	FDS40-0215	Honeywell HFR5-V Interface Cable. Requires on-aircraft CVR Rack Adaptor (FDS40-0247) for insitu downloads
	FDS40-0247	ARINC-757 CVR Rack Adaptor. HFR5-V CVR Aircraft Rack Adapter. (On-Aircraft)
	FDS40-5027	Honeywell HFR5-V Download Software
	FDS40-5033	Honeywell HFR5-V Demultiplex Download Software (Optional)
	FDS40-0274	Honeywell HFR5-V Interface Cable. Requires CVR Adaptor Cable for On-Wing Downloads

HHMPI CABLES, ACCESSORIES, & SOFTWARE (CONTINUED)



Flight Recorder P/N	HHMPI & Cable P/N	Description
Honeywell SSCVR 980-6020-XXX 980-6022-XXX	FDS40-0215	Honeywell CVR Rack Adaptor (On aircraft)
	FDS40-0216	Honeywell CVR Download and Power Interface Cable (On bench)
	FDS40-5020	Honeywell SSCVR Download Software
	FDS40-5021	Honeywell SSCVR Demultiplex Software Option
Honeywell DVDR 980-6025-001	FDS40-0227	Honeywell DVDR, Interface Cable. Requires on-aircraft CVR Rack Adaptor (FDS40-0247) for insitu downloads
	FDS40-0247	ARINC-757 CVR Rack Adaptor. HFR5-V CVR Aircraft Rack Adapter. (On-Aircraft)
	FDS40-5023	Honeywell DVD-R CVFDR Download Software
Honeywell (SRVIVR) 980-6050-XXX LW CVDR 980-6044-XXX LW CVR	FDS40-0259	Honeywell LW/SRVIVR CVR Power Cable (On-Aircraft)
	FDS40-5016	Honeywell SRVIVR Download Software
	FDS40-5021	Honeywell SSCVR Demultiplex Software (Optional)
Honeywell AR 980-6021-032 CVR 980-6021-066 CVR 980-6021-072 CVFDR 980-6021-083 CVFDR 980-6023-XXX (AR-30 AR-120)	FDS40-0246	Honeywell AR Series CVR/Combi Interface Cable (On-Aircraft)
	FDS40-5026	Honeywell AR Combi CVFDR Download Software (Downloads Both)
	FDS40-5021	Honeywell SSCVR Demultiplex Software (Optional)
Lockheed L209 10077A500-803 FDR	FDS40-0205	Lockheed L209 / Plessey 1584 Interface Cable
L3 Harris Micro QAR	FDS40-0241	L3 USB Cable
	FDS40-5017	L3 Comm QAR Software
L3 Harris F1000 SSFDR S603 / S703 / S903 / S800	FDS40-0201	L3 F1000, SSFDR Interface Cable
	FDS40-5014	L3 F1000 Download Software
L3 Harris FDR, CVR, CVDR FA2100 / FA2200 / FA2300	FDS40-0202	L3 FA2100 Interface Cable Requires on-aircraft CVR Rack Adaptor (FDS40-0247) for insitu downloads
	FDS40-0247	ARINC-757 CVR Rack Adaptor. Aircraft Rack Adapter. (On-Aircraft)
	FDS40-5011	L3 FA2100 FDR Download Software
	FDS40-5012	L3 FA2100 CVR Download Software
	FDS40-5013	L3 Wavefile Demultiplex Software (Optional)
L-3 Harris A200S CVR S200-00XX-00	FDS40-0272	L-3 A200S CVR Interface Cable (on bench) Requires on-aircraft CVR Rack Adaptor (FDS40-0247) for insitu downloads
	FDS40-0247	ARINC-757 CVR Rack Adaptor. Aircraft Rack Adapter. (On-Aircraft)
	FDS40-5031	L-3 A200S CVR Download Software (Demultiplex software PN: 47-0197-00 and User Manual PN: 30-0073 supplied with the HHMPI kit on the USB)

HHMPI CABLES, ACCESSORIES, & SOFTWARE (CONTINUED)



Flight Recorder P/N	HHMPI & Cable P/N	Description
L3 Harris SRVIVR 1493100-1XXXX CVR 1493100-2XXXX FDR 1493100-3XXX CVDR	FDS40-0209	L3 SRVIVR Interface Cable. Requires on-aircraft CVR Power cable FDS40-0259 for insitu downloads
	FDS40-0259	L3 SRVIVR CVR Power Cable (On-Aircraft)
	FDS40-5016	L-3 SRVIVR Download Software
L3 Harris FA 5000 FDR & CVR	FDS40-0223	L3 FA5000 Interface Cable. Requires on-aircraft CVR rack adaptor FDS40-0247 for insitu downloads
	FDS40-0247	ARINC-757 CVR Rack Adaptor. Aircraft Rack Adapter. (On-Aircraft)
	FDS40-5015	L3 FA5000 CVR & FDR Download Software
L3 Harris 5001 FDR & CVR	FDS40-0223	L3 FA5001 Interface Cable Requires FDS40-0076 FA5001 Rack Adaptor
	FDS40-0076	ARINC-757 CVR Rack Adaptor. Aircraft Rack Adapter. (On-Aircraft)
	FDS40-5015	FA5001 CVR & FDR Download Software
L3 Harris SRVIVR 1493100-1XXX CVR 1493199-3XXX CVDR	FDS40-0260	L3 SRVIVR CVR Power Cable (On-Aircraft)
	FDS40-5016	L-3 SRVIVR Download Software
Universal Avionics 1607 FDR 1606 CVR 1605 CVDR	FDS40-0224	UASC CVFDR Interface Cable. Requires on-aircraft CVR Power cable FDS40-0258 for insitu downloads
	FDS40-0258	UASC 1605 1606 series CVR Download Power Cable (On-Aircraft)
	FDS40-5030	UASC Download Software
BASE MCR 500-XXX SCR 500-XXX	FDS40-0212	BASE MCR 500 / SCR 500 Interface Cable
	FDS40-0269	BASE MCR 500 / SCR 500 Passive Interface Cable (Alternate)
	FDS40-5040	BASE Download Software
Penny & Giles MPFR D51615-XXX	FDS40-0271	MPFR Bench Download Cable (Requires portable 28V dc PSU)
	FDS40-5029	MPFR FDR Download Software
	FDS40-5034	MPFR CVR Decompression Software (Optional)
	FDS40-5035	MPFR CVR Download Software

ON-AIRCRAFT CVR DOWNLOAD CABLES



Flight Recorder P/N	HHMPI & Cable P/N	Description
Honeywell SSCVR 980-6020-XXX 980-6022-XXX	<u>FDS40-0215</u>	Honeywell CVR Aircraft Rack Adaptor (For On-Wing Download)
Honeywell AR 980-6021-032 CVR 980-6021-066 CVR 980-6021-072 CVFDR 980-6021-083 CVFDR 980-6023-XXX (AR-30/AR-120)	<u>FDS40-0246</u>	Honeywell AR Series CVR/Combi Interface Cable (For On-Wing Download)
Honeywell HFR5-V CVR 980-6032-001	<u>FDS40-0247</u>	ARINC-757 CVR Aircraft Rack Adaptor (For On-Wing Download)
Honeywell SRVIVR 980-6050-XXX (LW CVR) 980-6044-XXX (LW CVDR)	<u>FDS40-0259</u>	Honeywell LW/SRVIVR CVR Power Cable (For On-Wing Download)
L-3 Harris CVR / CVFDR FA2100 / FA2300 & A200S	<u>FDS40-0247</u>	ARINC-757 CVR Aircraft Rack Adaptor (For On-Wing Download)
L3 Harris FA5000 CVR	<u>FDS40-0247</u>	ARINC-757 CVR Aircraft Rack Adaptor (For On-Wing Download)
L3 Harris FA5001 CVR	FDS40-0076	L3 FA5001 CVR Power Cable (For On-Wing Download)
L-3 SRVIVR 1493100-1XXX 1493199-3XXX	<u>FDS40-0260</u>	L3 Com SRVIVR CVR Power Cable (For On-Wing Download)
Universal Avionics 1605 CVDR / 1606 CVR	<u>FDS40-0258</u>	UASC 1605 1606 series CVR Download Power Cable (For On-Wing Download)